CPS Power Cycle Instructions:

- 1. Turn both power switches on the BPU & BBMS to the "OFF" position
- 2. Turn both DC and AC disconnects on the PCS to the off state
- 3. Wait 1 minute
- 4. Turn both power switches on the BPU & BBMS to the "ON" position
- 5. Check the Status LED on BPU to make sure it is flashing green.
- 6. Turn both AC and DC disconnect switches back to the "ON" position
- 7. Wait for PCS LCD to display "Sys.Checking"
- 8. Using the LCD and the arrow keys, navigate to the menu option "8 Battery Set" and hit "ENT" until the screen shows "Initialing..."
- 9. Wait 2-3 minutes until the screen shows "Initial Success" or "Initial Failure"
- 10. Should initialization fail at this point, please open the system and identify the color of the LED status indicator on the BPU

If working on a two-sided 60kw unit, perform this process for both systems.







